




600 mm wide semi-integrated dishwasher with SS door for 12 place settings – by Candy



450 mm wide freestanding dishwasher for 9 place settings in SS – by Smeg

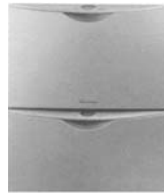

600 mm wide double 'Dish Drawer' in embossed SS for 6 + 6 place settings by Fisher & Paykel



600 w × 480 d × 460 h fully integrated 'compact' dishwasher for 6 place settings – by AEG



Dot matrix function display control panel on top edge of fully integrated dishwasher door – by Küppersbuch

Dishwashers

Programmes

Typical programmes to be found are:

pre-wash	cold water rinse when machine not used daily
half load wash	uses 10–12% less water
quick wash	30°C for 30 min
delicate wash	40°C for fine glass and china
economy wash	50°C (may not remove tea stains)
normal wash	65°C
intensive wash	65°C or 70°C with pre-wash
automatic	55–65°C, claims to select appropriate programme for maximum efficiency of water, energy and time

Programme times for a full size normal wash can vary from 120 to 155 min.